



SECTION - 1B - 1B & 1A - 1A
HEAD FRAME SCALE $1\frac{1}{2}'' = 1'-0''$

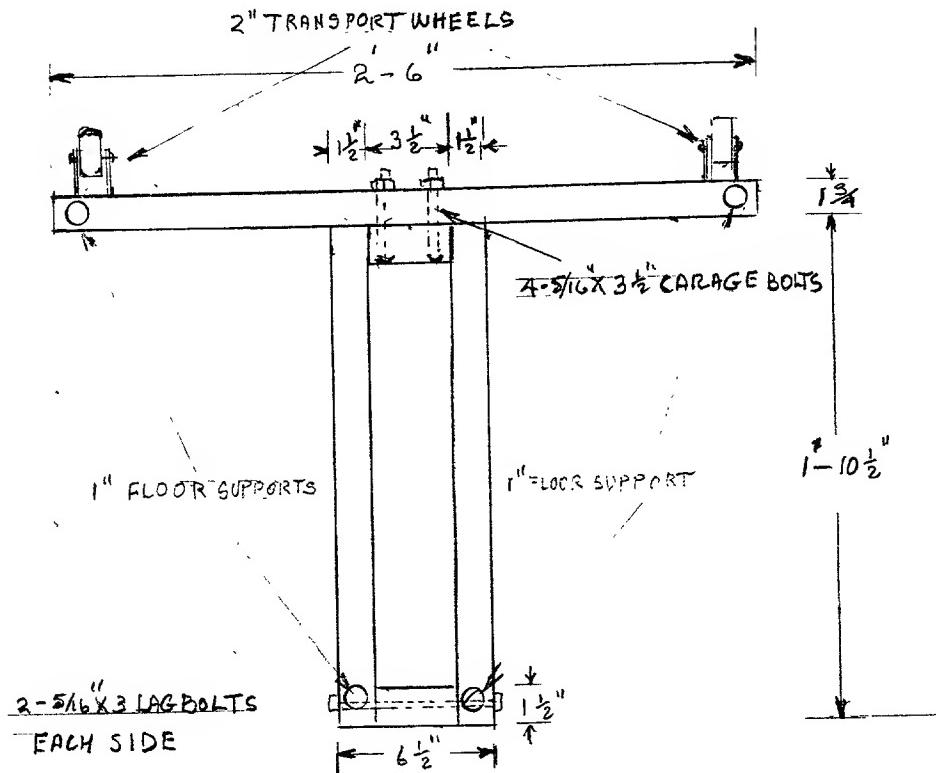


SECTION - 2B - 2B


BASE FRAME SCALE $1\frac{1}{2}'' = 1'-0''$ DRWG No 3 OF 9

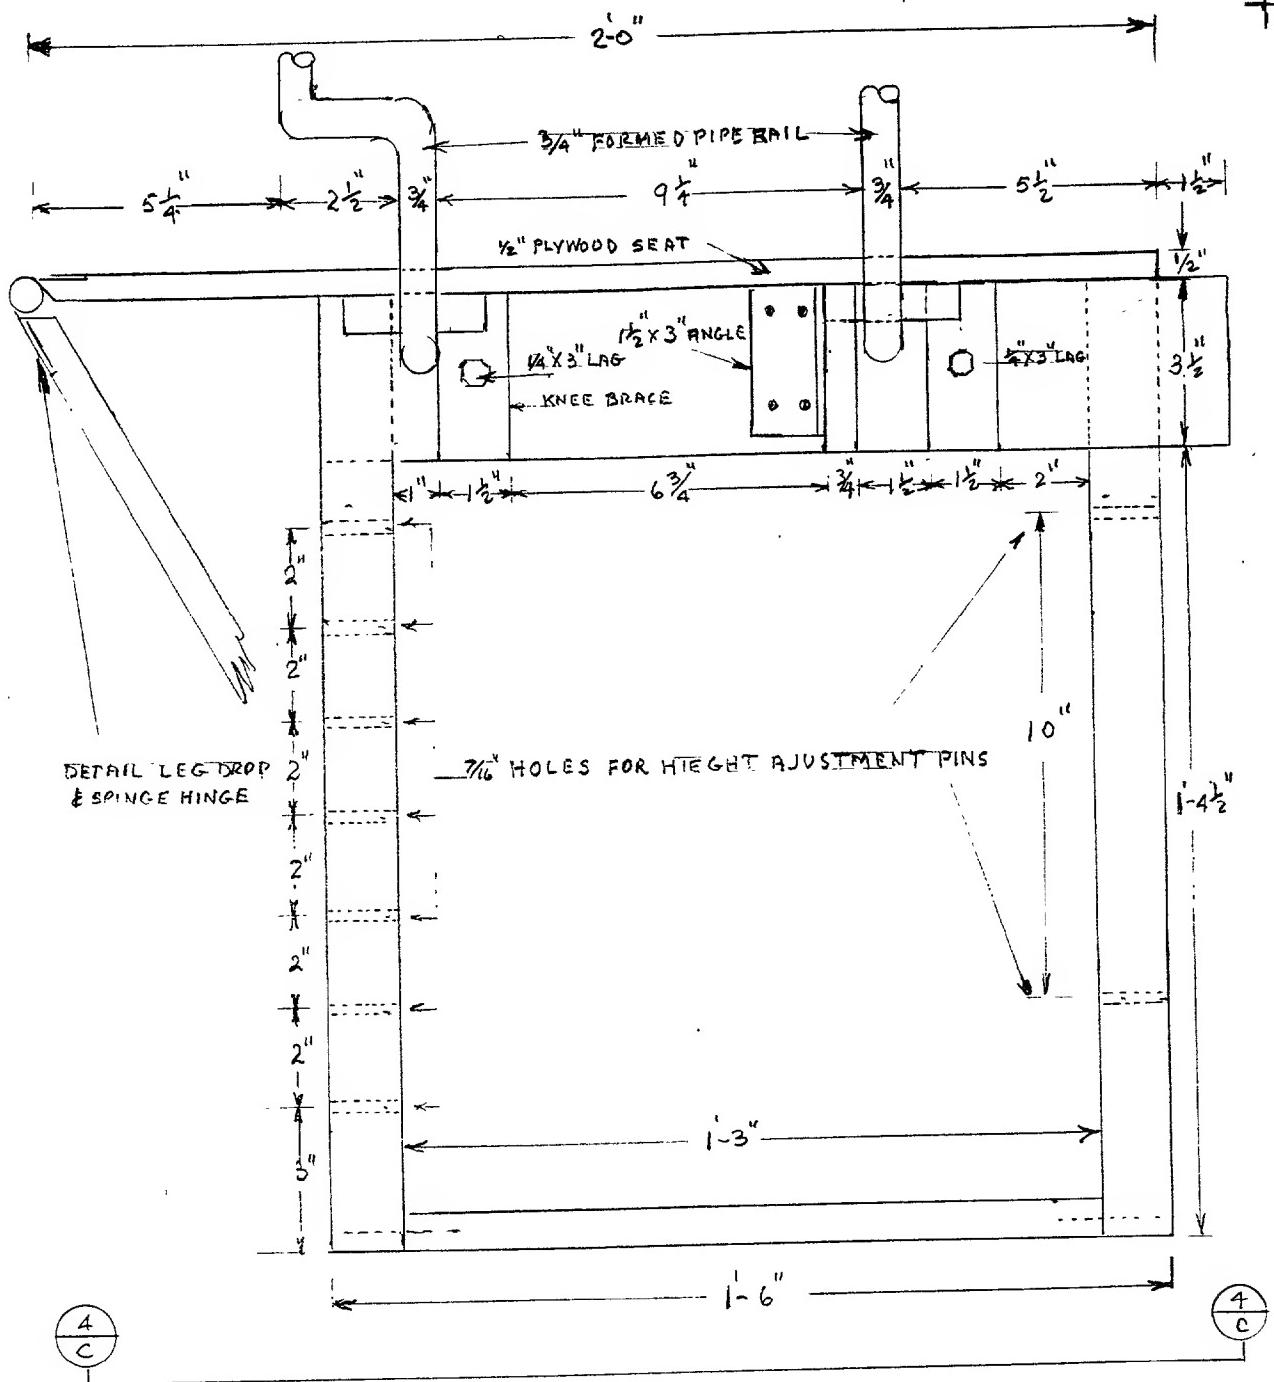


SIDE VIEW SEAT SCALE 3" = 1'-0" DRWG No 4 OF 9

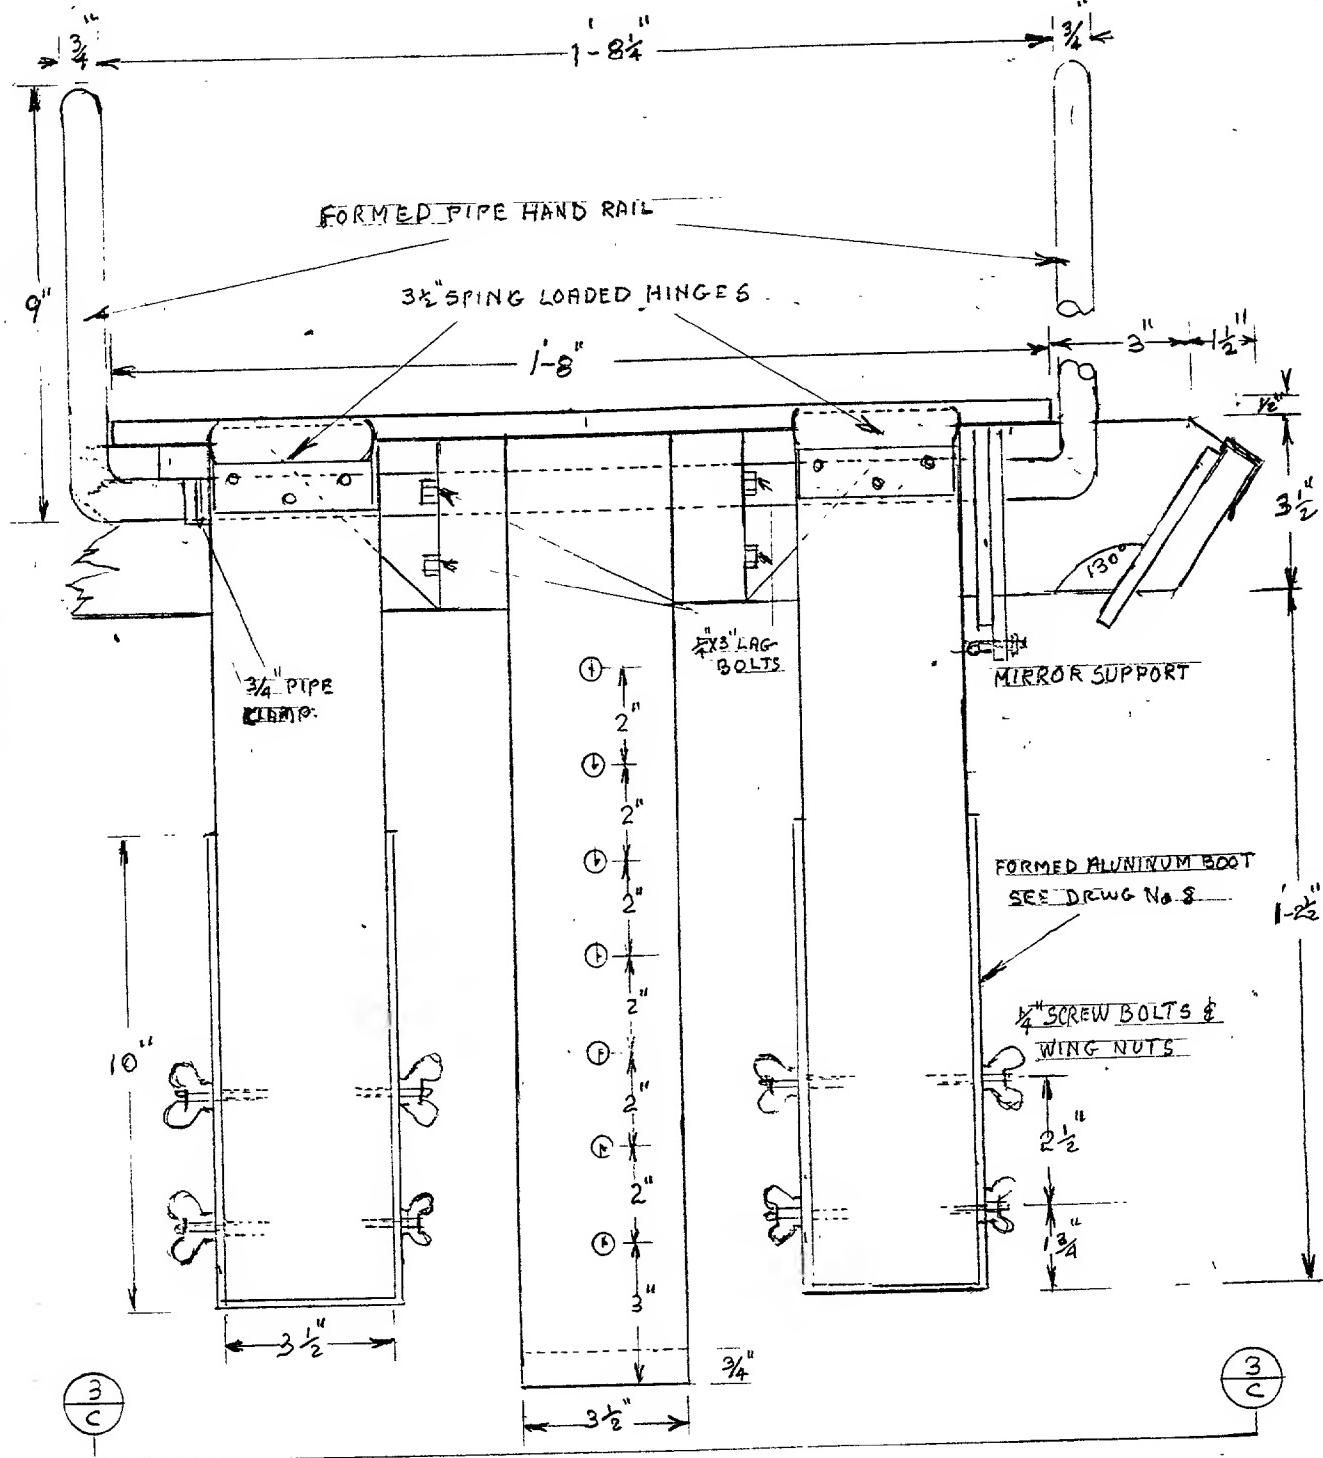


FRONT VIEW DRWG 5 OF 9 SCALE 3" = 1'-0"

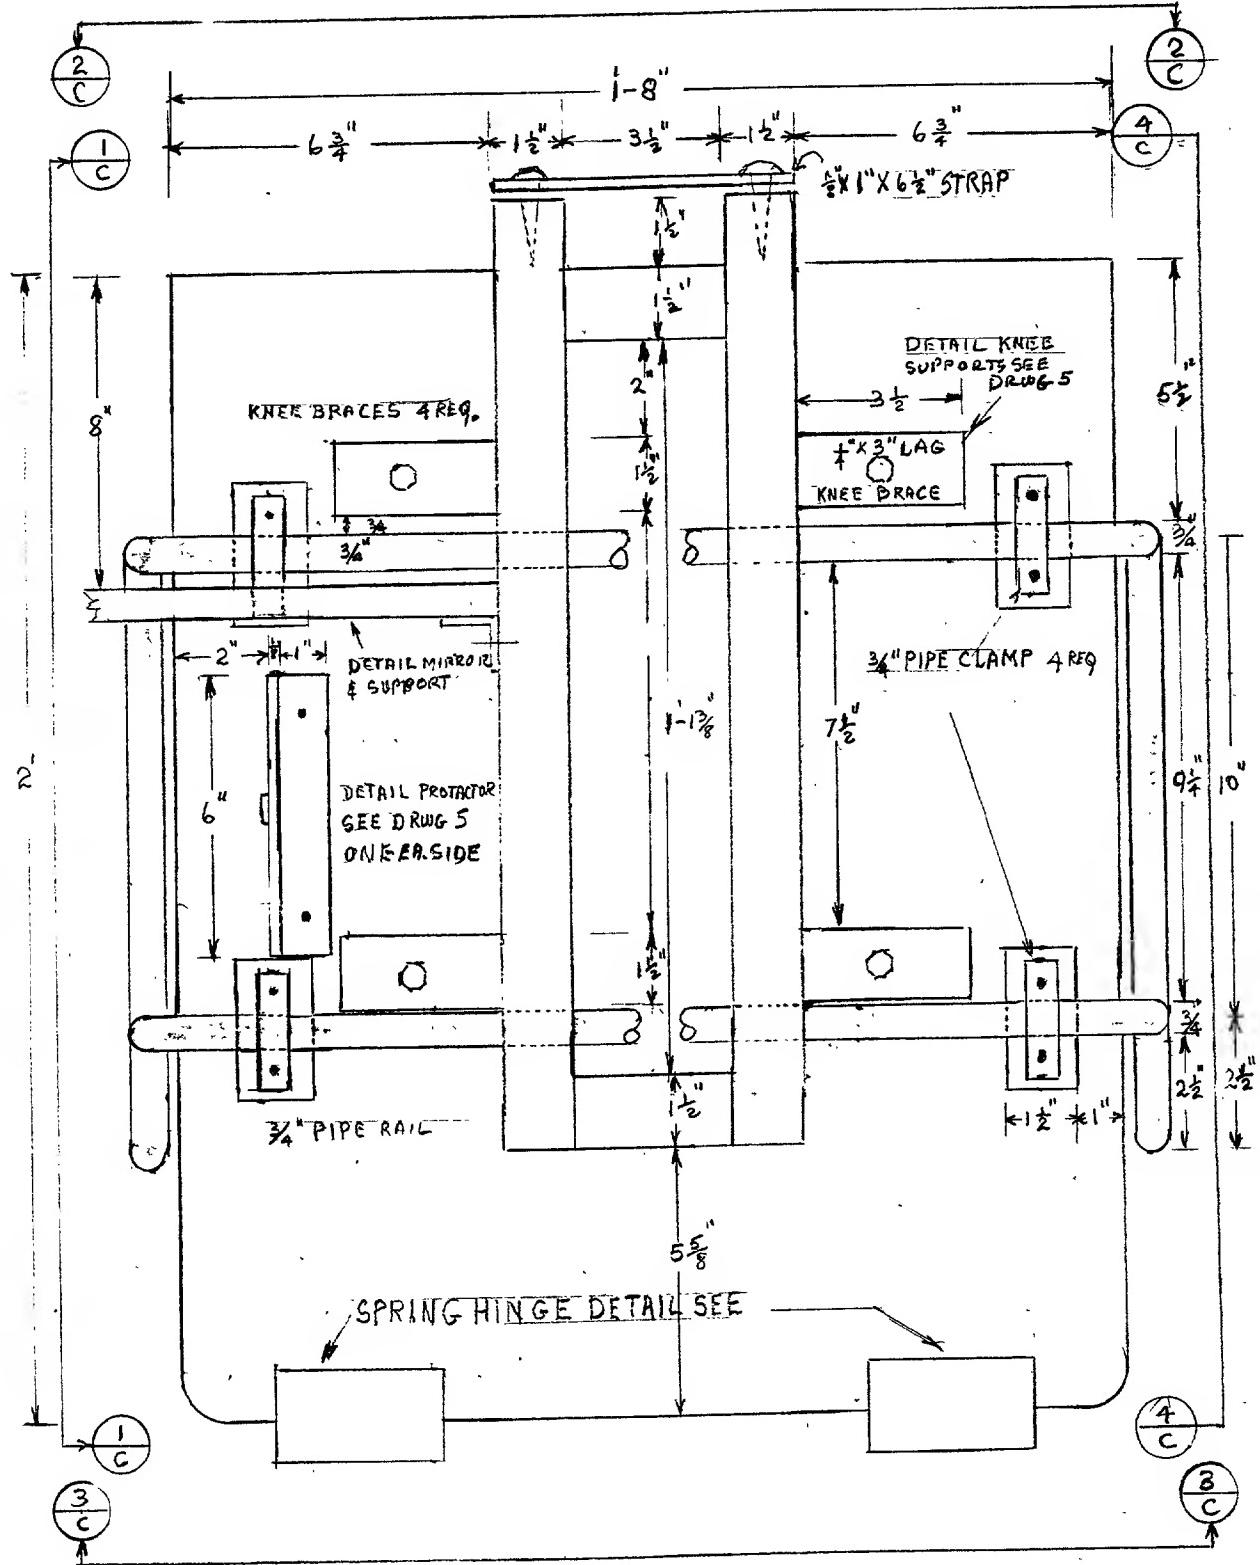


UNDER SIDE SEAT DRWG N 6 OF 9 "SCALE 3"=1'-0"

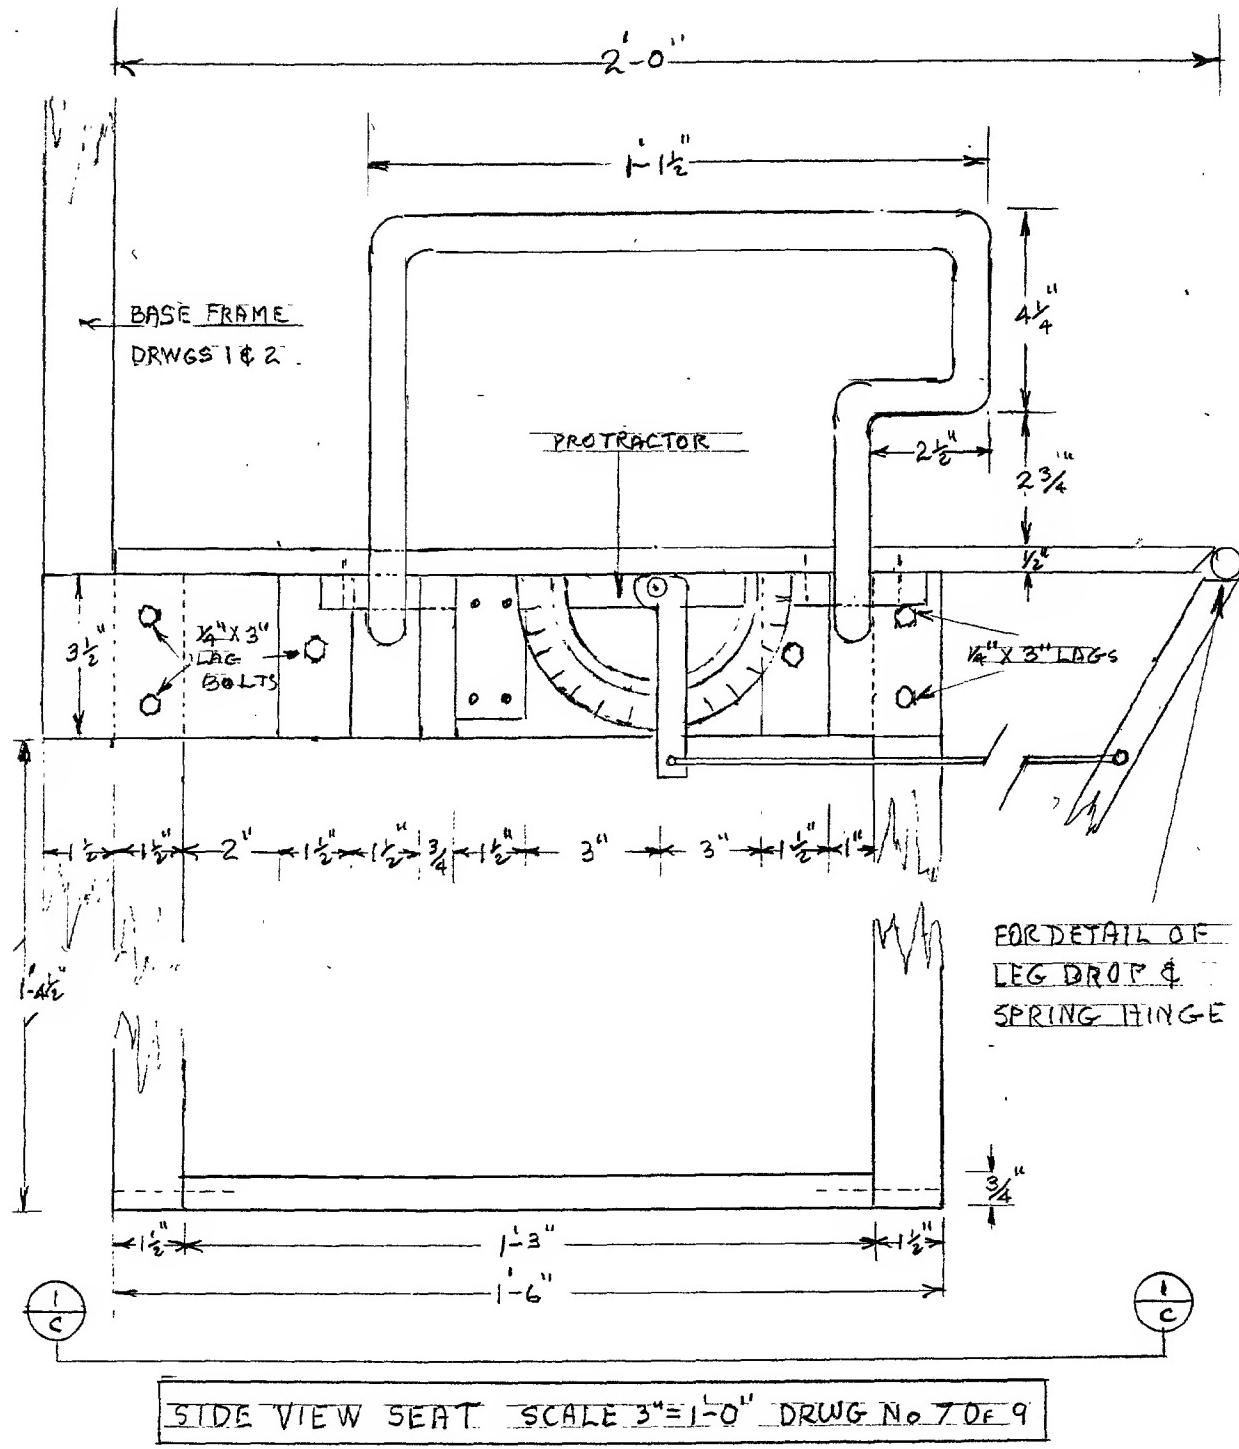

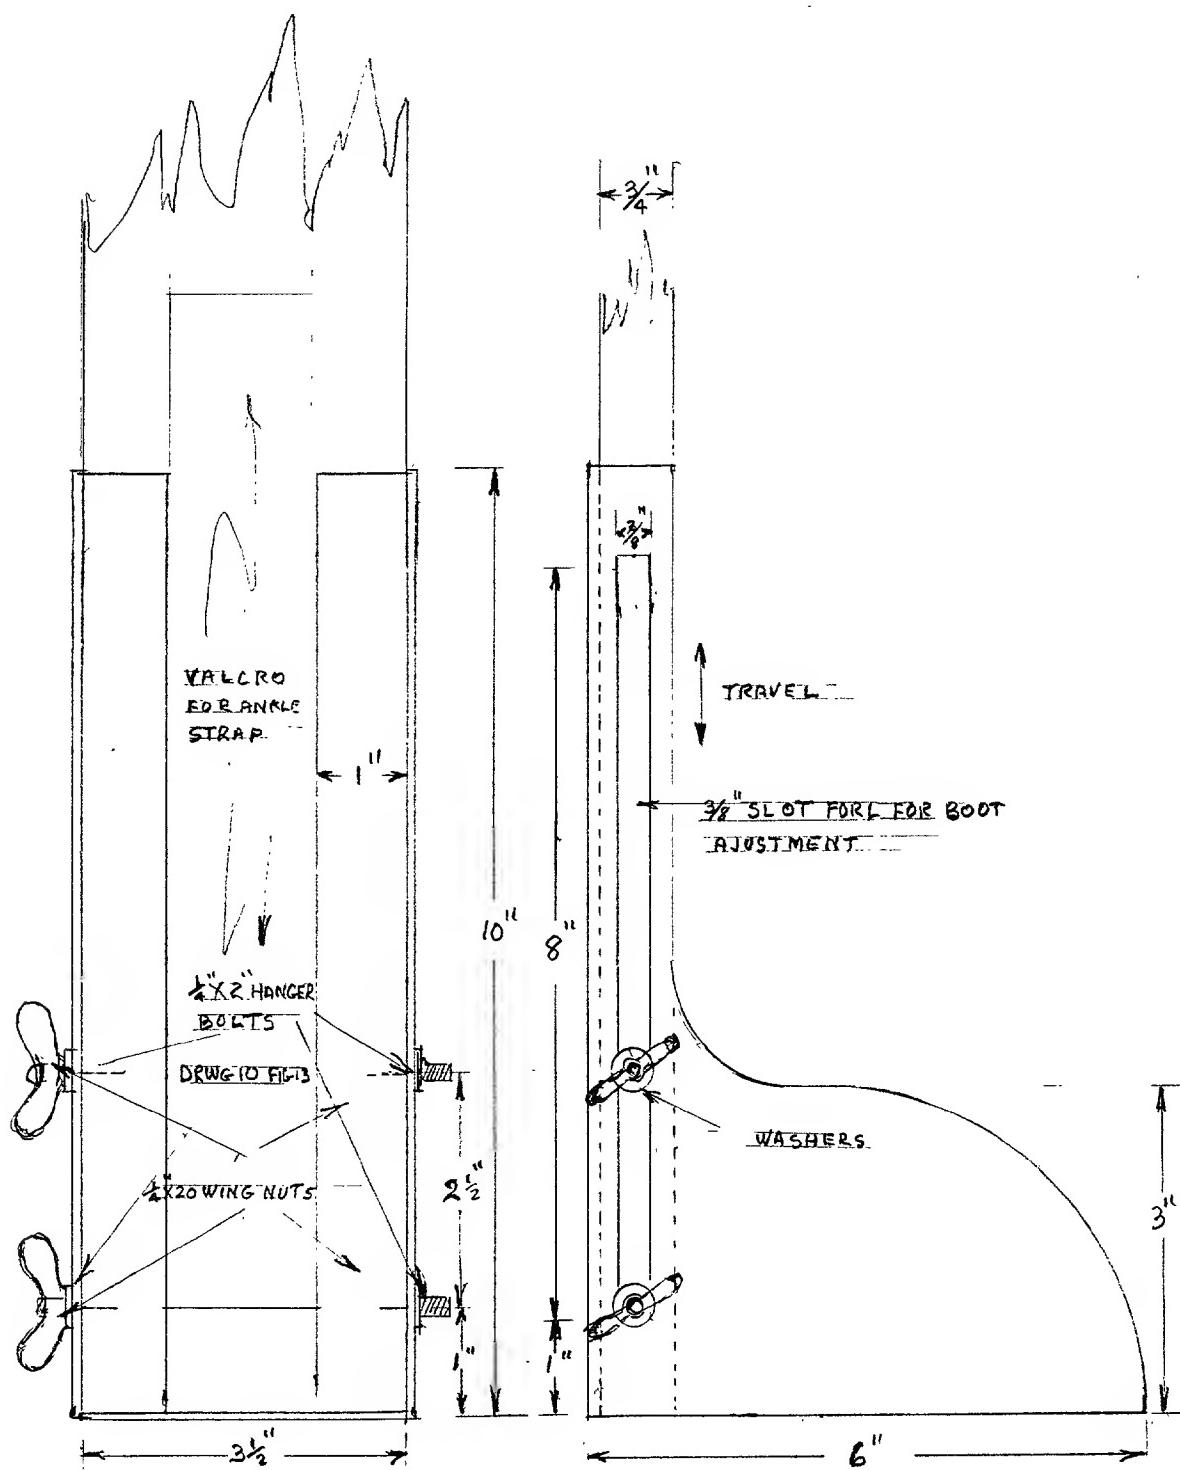

ALUMINUM BOOT-ADJUSTABLE DRWG No 8 Df9 SCALE=HALF FULL SIZE

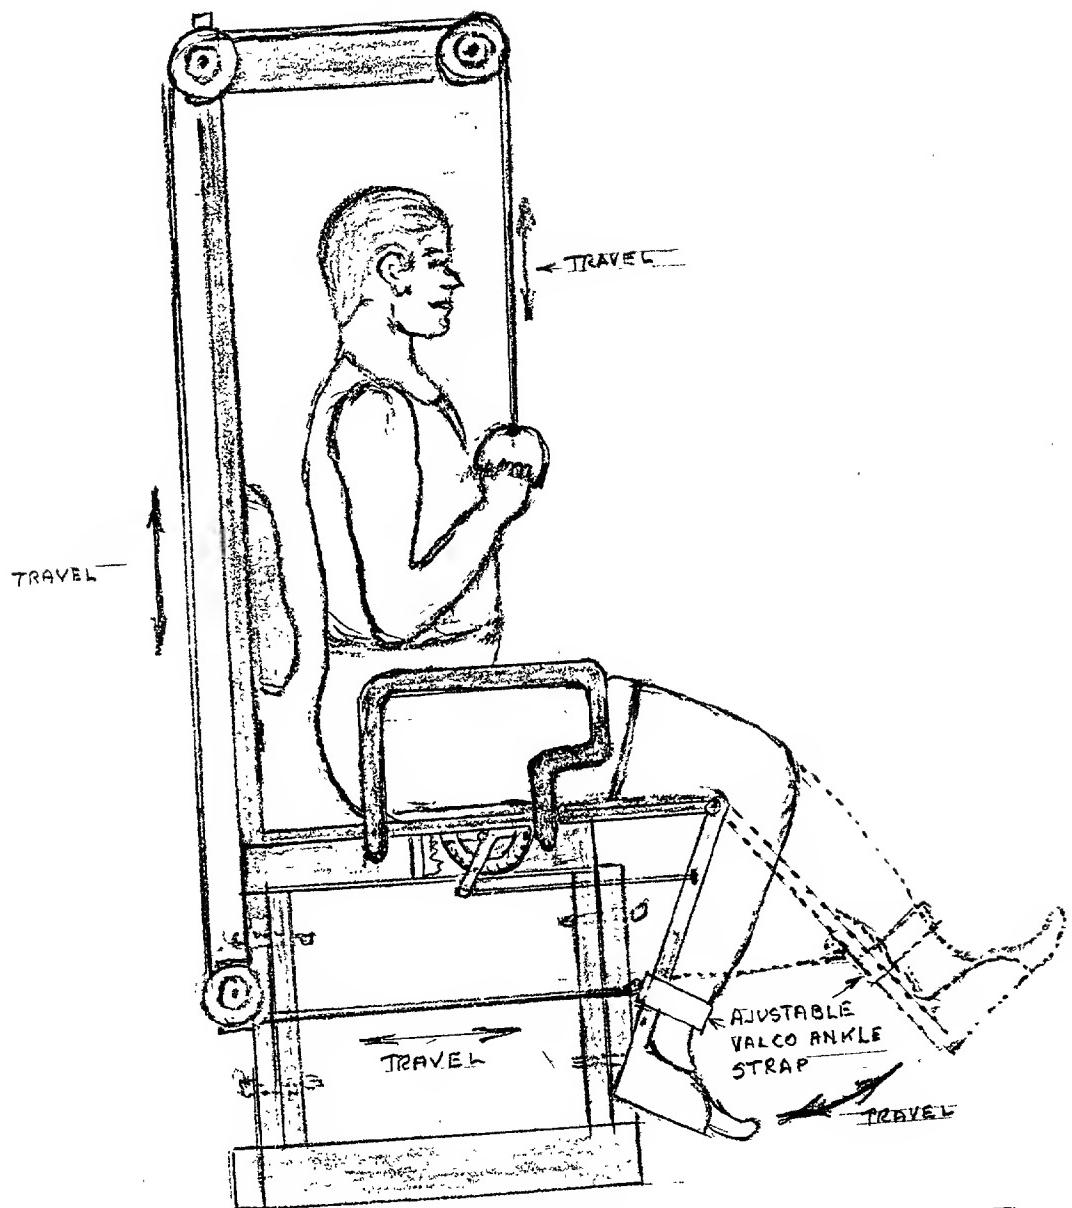

SCHEMATIC-POST OPERATIVE KNEE FLEXER
NO SCALE DRING 9.0F9